

OKIDATA™ C5900/5800/5500 • C5700/5600 CHIP REPLACEMENT INSTRUCTIONS



**OKIDATA™ C5800
COLOR PRINTER**



**OKIDATA™ C5800
SMARTCHIP**

www.uninetimaging.com/technical.asp


USA • UK • EUROPE • AFRICA • JAPAN • CHINA • BRAZIL • MEXICO • ARGENTINA • VENEZUELA

11124 Washington Blvd., Culver City, California U.S.A. 90232 • Ph +1 310 280 9620 • Fx +1 310 838 7294 • techsupport2@uninetimaging.com



1. Locate the chip cover in the upper left corner of the toner cartridge.

NOTE: Verify that this is a standard or high-yield cartridge. If it is a starter cartridge, it will not have a chip compartment.

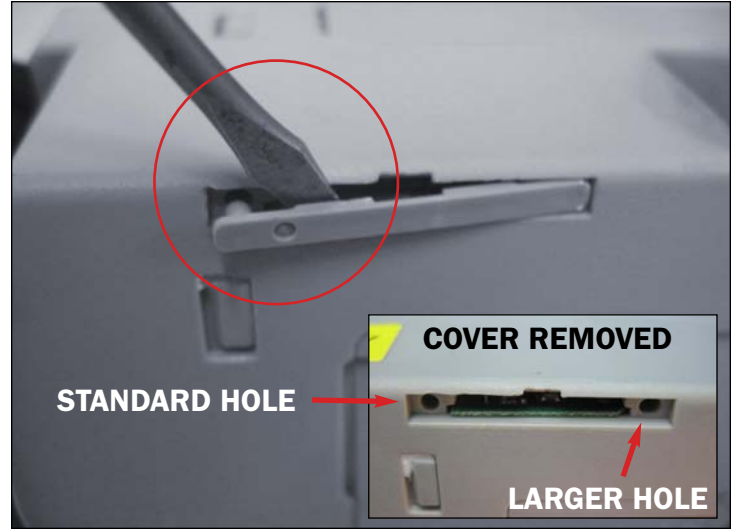

2. Remove the chip cover by inserting a small flat blade screwdriver into the appropriate cartridge opening shown. Slowly pry the cover back to release the clips holding the cover in place.

NOTE: Remove the cover side closest to the end so as not to damage the tabs.



3. Remove the OEM chip from inside the cover and insert the replacement chip.

NOTE: The circuits need to be facing up when inserting.



4. Position the new chip correctly and slide into the opening.

www.uninetimaging.com/technical.asp

USA • UK • EUROPE • AFRICA • JAPAN • CHINA • BRAZIL • MEXICO • ARGENTINA • VENEZUELA

11124 Washington Blvd., Culver City, California U.S.A. 90232 • Ph +1 310 280 9620 • Fx +1 310 838 7294 • techsupport2@uninetimaging.com



NOTES

5. Reattach the chip cover.

www.uninetimaging.com/technical.asp

USA • UK • EUROPE • AFRICA • JAPAN • CHINA • BRAZIL • MEXICO • ARGENTINA • VENEZUELA

11124 Washington Blvd., Culver City, California U.S.A. 90232 • Ph +1 310 280 9620 • Fx +1 310 838 7294 • techsupport2@uninetimaging.com